

**LOCTITE®**



# LOCTITE 3D MED414™

Elastomer

Blue, Clear, Red

**LOCTITE®**

Henkel Corporation  
[loctite3d@henkel.com](mailto:loctite3d@henkel.com)





## MED414™ ELASTOMER



### LOCTITE 3D MED414™

LOCTITE 3D MED414 is a high-performance, soft material boasting excellent elongation and tear strength properties.

Shore A hardness combined with good tear resistance and strength make this material ideal for use in a wide variety elastomeric medical device and skin contact applications.

LOCTITE 3D MED414 is TPO free formulated and capable of meeting ISO 10993-5-10-23 standards for biocompatibility when processed using a validated workflow.

Certificates of Compliance are available upon request.



#### Benefits:

- True elastomeric behavior
- Good balance of strength and elongation
- Good tear resistance & torsional flexibility
- Good print resolution with low shrinkage



#### Ideal for:


- Custom fit ear device applications for the audiology, noise protection equipment and consumer audiology parts.
- Wearables
- Medical devices and components



#### Markets:



Healthcare

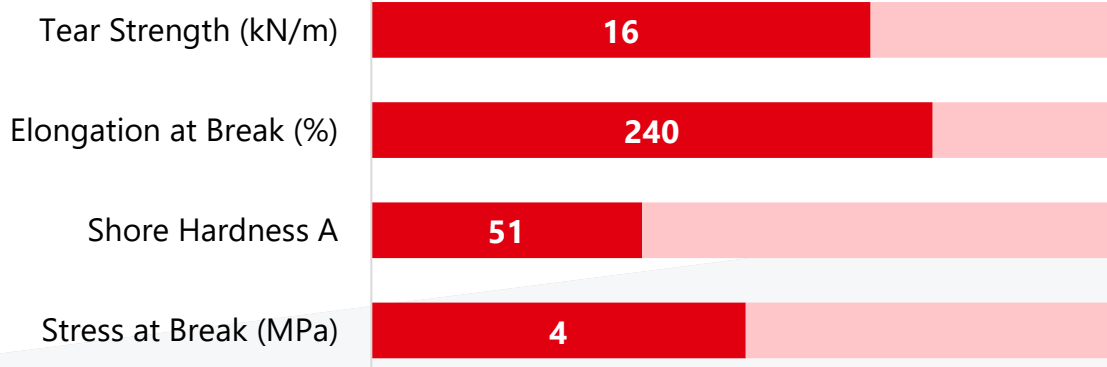

*\*Values shown are linked to LOCTITE MED414 Blue as reference, please refer to the specific mechanical properties for each of the colors shown in this document*





## MED414™ ELASTOMER BLUE



### PROPERTIES

Mechanical Properties	Measure	Method	Green	Post Processed (Broad Band UV)
Stress at 50% Strain	MPa	ASTM D412	0.7-0.9 <sup>[1]</sup>	1.6-1.7 <sup>[1]</sup>
Stress at 100% Strain	MPa	ASTM D412	1.1-1.3 <sup>[1]</sup>	2.1-2.2 <sup>[1]</sup>
Stress at 150% Strain	MPa	ASTM D412	1.4-1.7 <sup>[1]</sup>	2.7-2.8 <sup>[1]</sup>
Elongation at Break	%	ASTM D412	215-230 <sup>[1]</sup>	220-240 <sup>[1]</sup>
Stress at Break	MPa	ASTM D412	2.3-2.6 <sup>[1]</sup>	3.5-4 <sup>[1]</sup>
Tear Strength	kN/m	ASTM D624	7.5-8.5 <sup>[1]</sup>	13.5-16 <sup>[1]</sup>
Young's Modulus	MPa	ASTM D638	3-5 <sup>[1]</sup>	9-15 <sup>[1]</sup>
Tensile Stress at Break	MPa	ASTM D638	1.2-1.5 <sup>[1]</sup>	2.5-2.8 <sup>[1]</sup>
Tensile Elongation at Break	%	ASTM D638	160-170 <sup>[1]</sup>	170-190 <sup>[1]</sup>
Tensile Stress at Yield	MPa	ASTM D638	N/A	N/A

#### Other Properties

Energy Return	%	Internal	N/A	50 <sup>[2]</sup>
Shore Hardness (5 sec)	A	ASTM D2240	32 <sup>[3]</sup>	51 <sup>[4]</sup>
Water Absorption (24 hr)	%	ASTM D570	N/A	3.0 <sup>[5]</sup>
Solid Density	g/cm <sup>3</sup>	ASTM D1475	1.06 <sup>[6]</sup>	1.02 <sup>[6]</sup>

Liquid Properties	Measure	Method	Value
Viscosity at 25°C (77°F)	cP	ASTM D7867	1600 - 3000 <sup>[7]</sup>
Liquid Density	g/cm <sup>3</sup>	ASTM D1475	1.0 <sup>[8]</sup>

Biocompatibility	Method	Value
Cytotoxicity	ISO 10993-5	Comply <sup>[10]</sup>
Sensitization	ISO 10993-10	Comply <sup>[11]</sup>
Irritation	ISO 10993-23	Comply <sup>[11]</sup>

\*All specimen are printed unless otherwise noted. All specimen were conditioned in ambient lab conditions at 19-23°C / 40-60% RH for at least 24 hours.\*  
ASTM Methods and Parameters: D638-14 Type IV, 50 mm/min, D412-16 (21) Die C Shape, 3 mm thickness, 500 mm/min, D624, 500 mm/min

#### Internal Data Sources:

[1] GEN1092, [2] FOR42131, [3] FOR43680, [4] FOR42122, [5] FOR42148, [6] FOR42136, [7] GEN794243, [10] FOR52316, [11] FOR157979, [7] FOR42660, [8] FOR42136, [10] GEN250788, [11] FOR157979,





## WORKFLOW

Validated workflows need to be followed to achieve properties as provided in the TDS. Examples of validated workflow steps are listed below. Users should defer to the most current workflow information for best results which can be found at <https://www.loctiteam.com/prINTER-validation-settings>

## PRINTER SETTINGS

LOCTITE 3D MED414 BL is formulated to print optimally on industrial DLP printer. Read the safety data sheet carefully to get details about health and safety instructions. Recommended print parameters:

- Shake resin bottle well before usage
- Temperature: 20°C to 35°C
- Intensity: 3 mW/cm<sup>2</sup>, higher intensities can result in reduced surface quality and mechanical properties

Settings: 385nm at 3mW/cm <sup>2</sup>	Measure	Method	Value
Layer Thickness	µm	Internal	100
Burn-in Region	s	Internal	30
Transition Region	s	Internal	25
Model Region	s	Internal	12-16

Settings: 385nm at 3mW/cm <sup>2</sup>	Measure	Method	Value
E <sub>C</sub>	mJ/cm <sup>2</sup>	Internal	9 <sup>[9]</sup>
D <sub>p</sub>	mm	Internal	0.13 <sup>[9]</sup>

Settings: 385nm at 3mW/cm <sup>2</sup>	Measure	Method	Exposure time
D <sub>C</sub> = 50µm	s	Internal	5.7
D <sub>C</sub> = 100µm	s	Internal	7.5

### Test parameters:

\*Exposure times are calculated without a safety factor

Internal data source:

[9] FOR42274



## MED414™ ELASTOMER BLUE



## WORKFLOW

Validated workflows need to be followed to achieve properties as provided in the TDS. Examples of validated workflow steps are listed below. Users should defer to the most current workflow information for best results which can be found at <https://www.loctiteam.com/prINTER-validation-settings>

### CLEANING

LOCTITE 3D MED414 BL requires post processing to achieve specified properties. Prior to post curing, support structures should be removed from the printed part, and the part should then be washed. Use compressed air to remove residual solvent from the surface of the material between intervals.

Post Process Step	Agent	Method	Duration	Intervals	Additional Info
Cleaning Cycle 1	IPA	Ultra sonic bath	2 min	1	Allow parts to dry between intervals
Cleaning Cycle 2	IPA	Ultra sonic bath	2 min	1	Use fresh IPA
Dry	n.a.	Compressed air	10 to 60 s	2	Air pressure (50psi)
Wait before post curing	n.a.	Ambient condition	60 min	1	Room temperature

### POST CURING

LOCTITE 3D MED414 BL requires post curing to achieve specified properties. A wide array of post cure equipment can be used to cure appropriately. See Validation chart for examples of type and time. Exact devices with detailed information can be found by contacting us at [www.loctiteAM.com](http://www.loctiteAM.com).

UV Curing Unit	UV Source	Intensity	Cure time per side	Additional Settings (Shelf, Output Energy)
Loctite UVALOC 1000	Mercury Arc Bulb (broad spectrum)	50 mW/cm <sup>2</sup> at 380 nm	5min	500 W 2 <sup>nd</sup> Shelf from bottom

### STORAGE

Store LOCTITE MED414 BL in the unopened container in a dry location. Optimal Storage: 8°C to 30°. Storage below 8°C or above 30°C can adversely affect product properties. Material removed from containers may be contaminated during use. For this reason, filter used resin with 190µm mesh filter before placing back into proper storage container.





## MED414™ ELASTOMER BLUE




### AGEING AND ENVIRONMENTAL EFFECTS – HEAT AGEING


LOCTITE 3D MED414 BL was heat aged without load according to ASTM D3045. Test samples were exposed for a defined time at 50°C and conditioned for 24 hours at 22°C before mechanical testing. Control samples were stored at a constant 22°C. All samples were printed in the same print job using a validated workflow. Mechanical testing was conducted according to ASTM D412 at standard lab conditions (22°C). "0 weeks" represents non-aged samples stored at 22°C and tested 24 hours after post-processing.

Based on temperature dependence of reaction rates a test time of 6 weeks at 50°C can be interpreted as approximately 12 months at ambient temperature.


Elongation at Break after Heat Ageing at 50°C

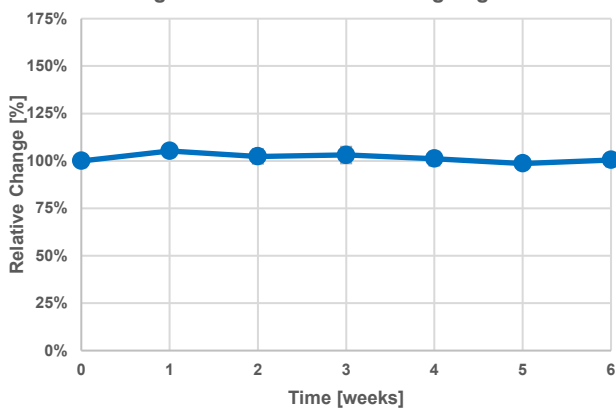


Stress at Break after Heat Ageing at 50°C

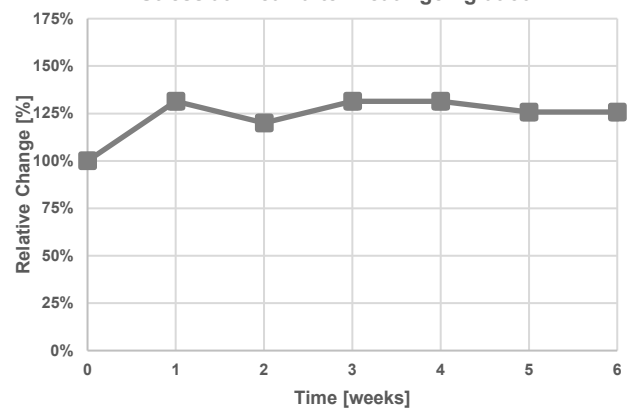

Stress at Strain (50%) after Heat Ageing at 50°C

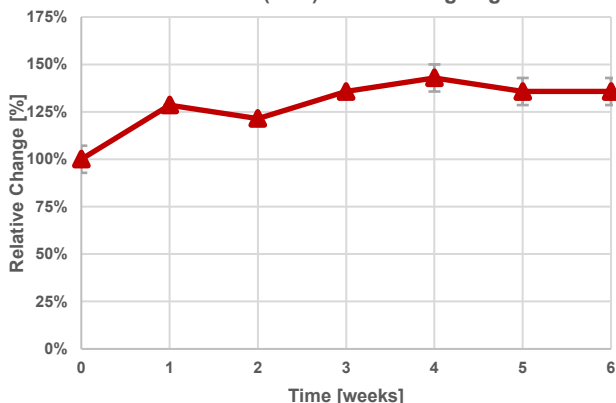

Stress at Strain (100%) after Heat Ageing at 50°C

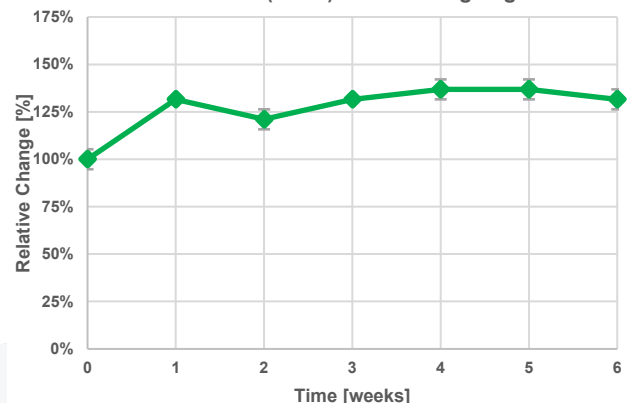

**Test parameters:**

ASTM D412: Type Die C, Pull speed: 500 mm/min, 22°C

**Internal Data Sources:**

FOR220974, FOR220970









## MED414™ ELASTOMER BLUE



### THERMAL INFLUENCE ON MECHANICAL PROPERTIES

LOCTITE 3D MED414 BL has been tested according to ASTM D412 at varied environmental temperatures, from -40°C to 100°C. All samples were printed in the same print job using a validated workflow. Mechanical testing was conducted according to ASTM D412. Before each test series samples were conditioned for 60 minutes at the specific test temperature.

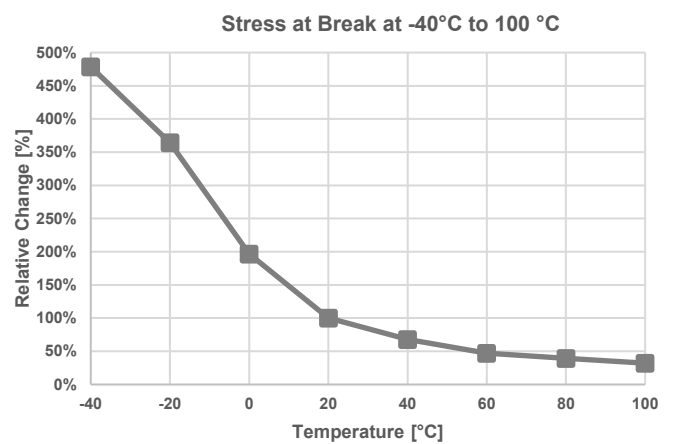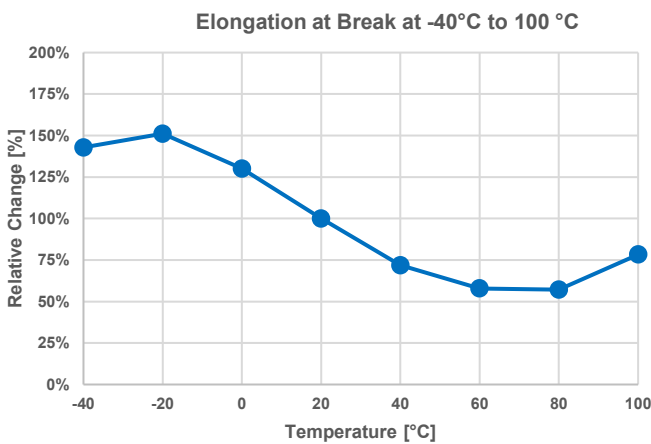

**Test parameters:**  
ASTM D412: Type Die C, Pull speed: 500 mm/min

**Internal Data Sources:**  
[FOR137768](#)







## MED414™ ELASTOMER BLUE



### AGEING AND ENVIRONMENTAL EFFECTS – MEDICAL CHEMICAL RESISTANCE

LOCTITE 3D MED414 BL has been tested after chemical ageing according to ASTM D543. The influence of chemicals was tested by measuring mechanical properties after different test times (Immersion test for 24 and 168 hours). Exposed samples were stored in containers and fully immersed in different chemicals. Samples were stirred every 24 hours using a shaker. After removal, exposed samples were washed and conditioned for 24 hours at 22°C before mechanical testing. All samples were printed using a validated workflow. Mechanical testing was conducted according to ASTM D412 at standard lab conditions (22°C). The 100% value represents the initial weight 24 hours after post-processing.

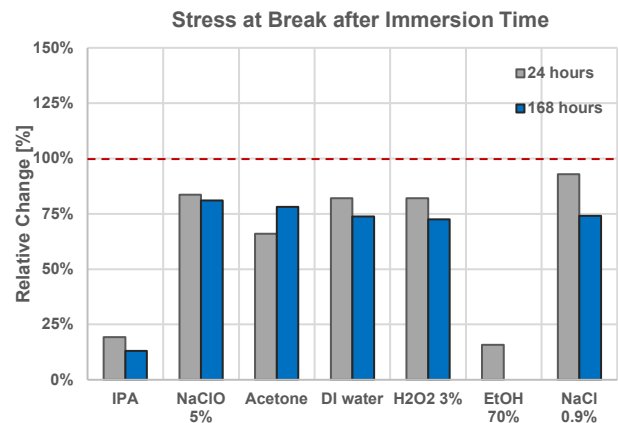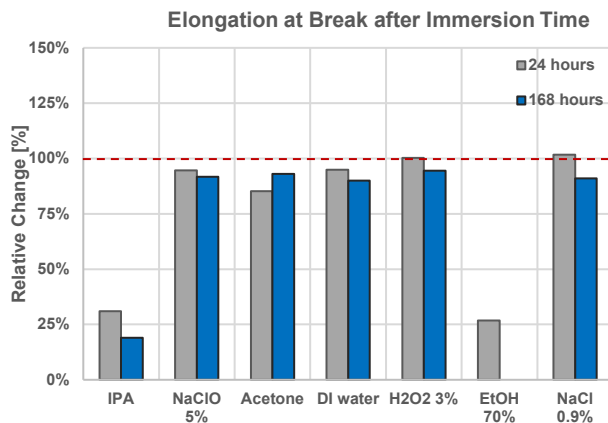

**Test parameters:**

ASTM D412: Type C, 22°C, Pull speed: 500 mm/min

ASTM D543: Samples immersed in different chemicals were stored at 22°C. Properties of media used: pH(H<sub>2</sub>O<sub>2</sub> 3%) = 2; pH(NaClO 5%) = 13

**Internal Data Sources:**

FOR713415, FOR713417, FOR713574, FOR713576, FOR716029, FOR716030, FOR716031








## MED414™ ELASTOMER BLUE



### AGEING AND ENVIRONMENTAL EFFECTS – MEDICAL CHEMICAL MASS SOAK

LOCTITE 3D MED414 BL has been tested after chemical ageing according to ASTM D543. The influence of chemicals was tested by measuring the mass change after different test times (Immersion test for 24 and 168 hours). Exposed samples were stored in containers and fully immersed in different chemicals. Samples were stirred every 24 hours using a shaker. After removal exposed samples were washed, dried and immediately weighed. All samples were printed using a validated workflow.

The 100% value represents the initial weight 24 hours after post-processing.

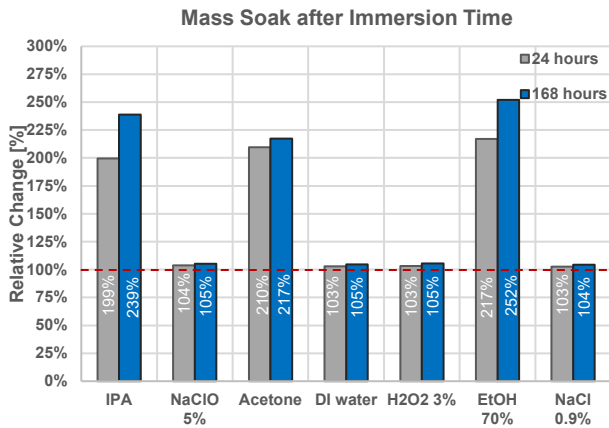

#### Test parameters:

ASTM D543: Samples immersed in different chemicals were stored at 22°C. Properties of media used: pH(H<sub>2</sub>O<sub>2</sub> 3%) = 2; pH(NaClO 5%) = 13

#### Internal Data Sources:

FOR713415, FOR713417, FOR713574, FOR713576, FOR716029, FOR716030, FOR716031





### PROPERTIES

Mechanical Properties	Measure	Method	Green	Post Processed
Young's Modulus	MPa	ASTM D638	3 <sup>[1]</sup>	6 - 7 <sup>[2]</sup>
Tensile Stress at Break	MPa	ASTM D638	2.5 - 2.9 <sup>[1]</sup>	3.1 - 3.5 <sup>[2]</sup>
Elongation at Break	%	ASTM D638	280 - 310 <sup>[1]</sup>	270 - 290 <sup>[2]</sup>
Stress at 50% Strain	MPa	ASTM D412	0.9 <sup>[3]</sup>	1.1 - 1.3 <sup>[4]</sup>
Stress at 100% Strain	MPa	ASTM D412	1.2 <sup>[3]</sup>	1.6 - 1.8 <sup>[4]</sup>
Stress at 150% Strain	MPa	ASTM D412	1.7 <sup>[3]</sup>	2.0 - 2.2 <sup>[4]</sup>
Stress at Break	MPa	ASTM D412	2.6 - 3.4 <sup>[3]</sup>	3.6 - 4.8 <sup>[4]</sup>
Strain at Break	%	ASTM D412	240 - 300 <sup>[3]</sup>	260 - 280 <sup>[4]</sup>
Tear Strength	kN/m	ASTM D624	8.4 - 8.8 <sup>[5]</sup>	12.9 - 13.3 <sup>[6]</sup>
Energy Return	%	Internal	-	53 - 58 <sup>[7,8]</sup>
Compression Set (22°C/24hr)	%	D395-B	-	7 - 12 <sup>[9,10]</sup>
Compression Set (70°C/24hr)	%	D395-B	-	25 - 36 <sup>[9,10]</sup>
Shore Hardness (5s)	A	ASTM D2240	-	53.8 - 55.4 <sup>[11]</sup>
<b>Other Properties</b>				
Solid Density (Cured)	g/cm <sup>3</sup>	ASTM D792	-	1.05 <sup>[13]</sup>
Water Absorption (24hr)	%	ASTM D570	-	2.6 <sup>[14]</sup>
Water Absorption (72hr)	%	ASTM D570	-	3.5 <sup>[14]</sup>
Water Absorption (168hr)	%	ASTM D570	-	4.0 <sup>[14]</sup>
Thermal Conductivity	W/(m·K)	ASTM D5930	-	0.2 <sup>[15]</sup>
Heat Capacity	J/(g·K)	ASTM D5930	-	1.5 <sup>[15]</sup>

#### Test parameters:

\*All specimen are printed unless otherwise noted. All specimen were conditioned in ambient lab conditions at 19-23°C / 40-60% RH for at least 24 hours.\* ASTM Methods: D638 Type IV, 50 mm/min, D412 Type C, 500 mm/min, D570 Sheet samples 24hr@ 23°C, D2240, Type "A" (5 seconds), D7867, D1475; ASTM D5930 80x40x10 mm<sup>3</sup>

\*The biological assessment has been performed based on the in vitro method according to ISO10993-23

#### Internal Data Sources:

[1] FOR870272, [2] FOR870281, [3] FOR867845, [4] FOR867883, [5] FOR861472, [6] FOR867883, [7] FOR871848, [8] FOR871850, [9] FOR871842, [10] FOR871844, [11] FOR873342, [12] FOR873341, [13] FOR873333, [14] FOR873346, [15] FOR873340





## MED414™ ELASTOMER CLEAR



### PROPERTIES

Biocompatibility	Method	Green	Post Processed
Cytotoxicity	ISO 10993-5	-	<i>pending</i> <sup>[1]</sup>
Sensitization	ISO 10993-10	-	<i>pending</i> <sup>[2]</sup>
Irritation	ISO 10993-23	-	<i>pending</i> <sup>[3]</sup>

Liquid Properties	Measure	Method	Value
Viscosity at 25°C (77°F)	cP	ASTM D7867	2500 - 3500 <sup>[4]</sup>
Liquid Density	g/cm <sup>3</sup>	ASTM D1475	1.0 <sup>[5]</sup>

#### Test parameters:

\*All specimen are printed unless otherwise noted. All specimen were conditioned in ambient lab conditions at 19-23°C / 40-60% RH for at least 24 hours.\* ASTM Methods: D638 Type IV, 50 mm/min, D412 Type C, 500 mm/min, D570 Sheet samples 24hr@ 23°C, D2240, Type "A" (5 seconds), D7867, D1475; ASTM D5930 80x40x10 mm<sup>3</sup>

\*The biological assessment has been performed based on the in vitro method according to ISO10993-23

#### Internal Data Sources:

[1] FOR868308, [2] FOR868316, [3] FOR868313, [4] FOR868039, [5] FOR861330





## WORKFLOW

Validated workflows need to be followed to achieve properties as provided in the TDS. Examples of validated workflow steps are listed below. Users should defer to the most current workflow information for best results which can be found at <https://www.loctiteam.com/prINTER-validation-settings>

## PRINTER SETTINGS

LOCTITE 3D MED414 CL is formulated to print optimally on industrial DLP printer. Read the safety data sheet carefully to get details about health and safety instructions. Recommended print parameters:

- Shake resin bottle well before usage
- Temperature: 20°C to 35°C
- Intensity: 5 mW/cm<sup>2</sup>

Settings: 385nm at 5mW/cm <sup>2</sup>	Measure	Method	Value
Layer Thickness	µm	Internal	100
Burn-in Region	s	Internal	50
Transition Region	s	Internal	25
Model Region	s	Internal	8

Settings: 385nm at 5mW/cm <sup>2</sup>	Measure	Method	Value
E <sub>C</sub>	mJ/cm <sup>2</sup>	Internal	12.4 <sup>[1]</sup>
D <sub>P</sub>	mm	Internal	0.24 <sup>[1]</sup>

Settings: 385nm at 5mW/cm <sup>2</sup>	Measure	Method	Exposure time
D <sub>C</sub> = 50µm	s	Internal	5-6
D <sub>C</sub> = 100µm	s	Internal	7-8

Test parameters:

\*Exposure times are calculated without a safety factor

Internal data source  
[1] FOR863459





## MED414™ ELASTOMER CLEAR



## WORKFLOW

Validated workflows need to be followed to achieve properties as provided in the TDS. Examples of validated workflow steps are listed below. Users should defer to the most current workflow information for best results which can be found at <https://www.loctiteam.com/prINTER-validation-settings>

### CLEANING

LOCTITE 3D MED414 CL requires post processing to achieve specified properties. Prior to post curing, support structures should be removed from the printed part, and the part should then be washed. Use compressed air to remove residual solvent from the surface of the material between intervals.

Post Process Step	Agent	Method	Duration	Intervals	Additional Info
Cleaning Cycle 1	IPA	Ultra sonic bath	2 min	1	Allow parts to dry between intervals
Cleaning Cycle 2	IPA	Ultra sonic bath	2 min	1	Use fresh IPA
Dry	n.a.	Compressed air	10 to 60 s	2	Air pressure (50psi)
Wait before post curing	n.a.	Ambient condition	60 min	1	Room temperature

### POST CURING

LOCTITE 3D MED414 CL requires post curing to achieve specified properties. A wide array of post cure equipment can be used to cure appropriately. See Validation chart for examples of type and time. Exact devices with detailed information can be found by contacting us at [www.loctiteAM.com](http://www.loctiteAM.com).

UV Curing Unit	UV Source	Intensity	Cure time per side	Additional Settings (Shelf, Output Energy)
Loctite UVALOC 1000	Mercury Arc Bulb (broad spectrum)	50 mW/cm <sup>2</sup> at 380 nm	5min	500 W 2 <sup>nd</sup> Shelf from bottom

### STORAGE

Store LOCTITE MED414 CL in the unopened container in a dry location. Optimal Storage: 8°C to 30°. Storage below 8°C or above 30°C can adversely affect product properties. Material removed from containers may be contaminated during use. For this reason, filter used resin with 190µm mesh filter before placing back into proper storage container.





## MED414™ ELASTOMER RED



### PROPERTIES

Mechanical Properties	Measure	Method	Green	Post Processed
Young's Modulus	MPa	ASTM D638	3 - 4 <sup>[1]</sup>	6 <sup>[2]</sup>
Tensile Stress at Break	MPa	ASTM D638	1.7 - 2.1 <sup>[1]</sup>	2.4 - 2.6 <sup>[2]</sup>
Elongation at Break	%	ASTM D638	200 - 250 <sup>[1]</sup>	210 - 230 <sup>[2]</sup>
Stress at 50% Strain	MPa	ASTM D412	0.6 <sup>[3]</sup>	1.2 - 1.3 <sup>[4]</sup>
Stress at 100% Strain	MPa	ASTM D412	0.9 <sup>[3]</sup>	1.7 - 1.8 <sup>[4]</sup>
Stress at 150% Strain	MPa	ASTM D412	1.2 <sup>[3]</sup>	2.2 - 2.3 <sup>[4]</sup>
Stress at Break	MPa	ASTM D412	2.3 - 3.0 <sup>[3]</sup>	4.0 - 4.3 <sup>[4]</sup>
Strain at Break	%	ASTM D412	260 - 300 <sup>[3]</sup>	260 - 280 <sup>[4]</sup>
Tear Strength	kN/m	ASTM D624	6.6 - 6.8 <sup>[5]</sup>	12.0 - 13.0 <sup>[6]</sup>
Energy Return	%	Internal	-	55-58 <sup>[10,11]</sup>
Compression Set (22°C/24hr)	%	D395-B	-	7-9 <sup>[12,13]</sup>
Compression Set (70°C/24hr)	%	D395-B	-	28 - 36 <sup>[12,13]</sup>
Shore Hardness (5s)	A	ASTM D2240	-	56.1 - 56.5 <sup>[8]</sup>
<b>Other Properties</b>				
Solid Density (Cured)	g/cm <sup>3</sup>	ASTM D792	-	1.06 <sup>[14]</sup>
Water Absorption (24hr)	%	ASTM D570	-	3.0 <sup>[7]</sup>
Water Absorption (72hr)	%	ASTM D570	-	4.1 <sup>[7]</sup>
Water Absorption (168hr)	%	ASTM D570	-	4.7 <sup>[7]</sup>
Thermal Conductivity	W/(m·K)	ASTM D5930	-	0.2 <sup>[9]</sup>
Heat Capacity	J/(g·K)	ASTM D5930	-	1.5 <sup>[9]</sup>

#### Test parameters:

\*All specimen are printed unless otherwise noted. All specimen were conditioned in ambient lab conditions at 19-23°C / 40-60% RH for at least 24 hours.\* ASTM Methods: D638 Type IV, 50 mm/min, D412 Type C, 500 mm/min, D570 Sheet samples 24hr@ 23°C, D2240, Type "A" (5 seconds), D7867, D1475; ASTM D5930 80x40x10 mm<sup>3</sup>

\*The biological assessment has been performed based on the in vitro method according to ISO10993-23

#### Internal Data Sources:

[1] FOR853623, [2] FOR853626, [3] FOR847211, [4] FOR847215, [5] FOR847880, [6] FOR847217, [7] FOR856571, [8] FOR856555, [9] FOR856582, [10] FOR856708, [11] FOR856703  
[12] FOR856697, [13] FOR856691, [14] FOR856590







## MED414™ ELASTOMER RED



### PROPERTIES

Biocompatibility	Method	Green	Post Processed
Cytotoxicity	ISO 10993-5	-	<i>pending</i> <sup>[11]</sup>
Sensitization	ISO 10993-10	-	
Irritation	ISO 10993-23	-	

Liquid Properties	Measure	Method	Value
Viscosity at 25°C (77°F)	cP	ASTM D7867	1800 - 2800 <sup>[10]</sup>
Liquid Density	g/cm <sup>3</sup>	ASTM D1475	1.0 <sup>[9]</sup>

#### Test parameters:

\*All specimen are printed unless otherwise noted. All specimen were conditioned in ambient lab conditions at 19-23°C / 40-60% RH for at least 24 hours.\* ASTM Methods: D638 Type IV, 50 mm/min, D412 Type C, 500 mm/min, D570 Sheet samples 24hr@ 23°C, D2240, Type "A" (5 seconds), D7867, D1475; ASTM D5930 80x40x10 mm<sup>3</sup>

\*The biological assessment has been performed based on the in vitro method according to ISO10993-23

#### Internal Data Sources:

[9] FOR804352, [10] FOR824473, [11] FOR840119





## WORKFLOW

Validated workflows need to be followed to achieve properties as provided in the TDS. Examples of validated workflow steps are listed below. Users should defer to the most current workflow information for best results which can be found at <https://www.loctiteam.com/prINTER-validation-settings>

## PRINTER SETTINGS

LOCTITE 3D MED414 RD is formulated to print optimally on industrial DLP printer. Read the safety data sheet carefully to get details about health and safety instructions. Recommended print parameters:

- Shake resin bottle well before usage
- Temperature: 20°C to 35°C
- Intensity: 5 mW/cm<sup>2</sup>

Settings: 385nm at 5mW/cm <sup>2</sup>	Measure	Method	Value
Layer Thickness	µm	Internal	100
Burn-in Region	s	Internal	40
Transition Region	s	Internal	25
Model Region	s	Internal	7

Settings: 385nm at 5mW/cm <sup>2</sup>	Measure	Method	Value
E <sub>C</sub>	mJ/cm <sup>2</sup>	Internal	12.7 <sup>[1]</sup>
D <sub>P</sub>	mm	Internal	0.17 <sup>[1]</sup>

Settings: 385nm at 5mW/cm <sup>2</sup>	Measure	Method	Exposure time
D <sub>C</sub> = 50µm	s	Internal	4-5
D <sub>C</sub> = 100µm	s	Internal	6-7

Internal data source:

[1] FOR795535





## MED414™ ELASTOMER RED



## WORKFLOW

Validated workflows need to be followed to achieve properties as provided in the TDS. Examples of validated workflow steps are listed below. Users should defer to the most current workflow information for best results which can be found at <https://www.loctiteam.com/prINTER-validation-settings>

### CLEANING

LOCTITE 3D MED414 RD requires post processing to achieve specified properties. Prior to post curing, support structures should be removed from the printed part, and the part should then be washed. Use compressed air to remove residual solvent from the surface of the material between intervals.

Post Process Step	Agent	Method	Duration	Intervals	Additional Info
Cleaning Cycle 1	IPA	Ultra sonic bath	2 min	1	Allow parts to dry between intervals
Cleaning Cycle 2	IPA	Ultra sonic bath	2 min	1	Use fresh IPA
Dry	n.a.	Compressed air	10 to 60 s	2	Air pressure (50 psi)
Wait before post curing	n.a.	Ambient condition	60 min	1	Room temperature

### POST CURING

LOCTITE 3D MED414 RD requires post curing to achieve specified properties. A wide array of post cure equipment can be used to cure appropriately. See Validation chart for examples of type and time. Exact devices with detailed information can be found by contacting us at [www.loctiteAM.com](http://www.loctiteAM.com).

UV Curing Unit	UV Source	Intensity	Cure time per side	Additional Settings (Shelf, Output Energy)
Loctite UVALOC 1000	Mercury Arc Bulb (broad spectrum)	50 mW/cm <sup>2</sup> at 380 nm	5 min	500 W 2 <sup>nd</sup> Shelf from bottom

### STORAGE

Store LOCTITE MED414 RD in the unopened container in a dry location. Optimal Storage: 8°C to 30°. Storage below 8°C or above 30°C can adversely affect product properties. Material removed from containers may be contaminated during use. For this reason, filter used resin with 190µm mesh filter before placing back into proper storage container.





## MED414™ ELASTOMER RED




### AGEING AND ENVIRONMENTAL EFFECTS – HEAT AGEING


LOCTITE 3D MED414 RD was heat aged without load according to ASTM D3045. Test samples were exposed for a defined time at 50°C and conditioned for 24 hours at 22°C before mechanical testing. Control samples were stored at a constant 22°C. All samples were printed in the same print job using a validated workflow. Mechanical testing was conducted according to ASTM D412 at standard lab conditions (22°C). "0 weeks" represents non-aged samples stored at 22°C and tested 24 hours after post-processing.

Based on temperature dependence of reaction rates a test time of 6 weeks at 50°C can be interpreted as approximately 12 months at ambient temperature.


Elongation at Break after Heat Ageing at 50°C

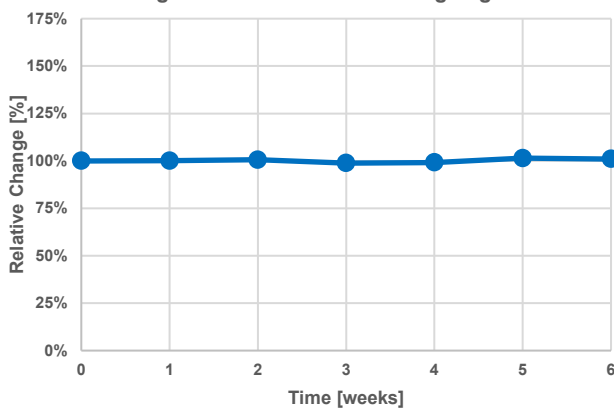


Stress at Break after Heat Ageing at 50°C

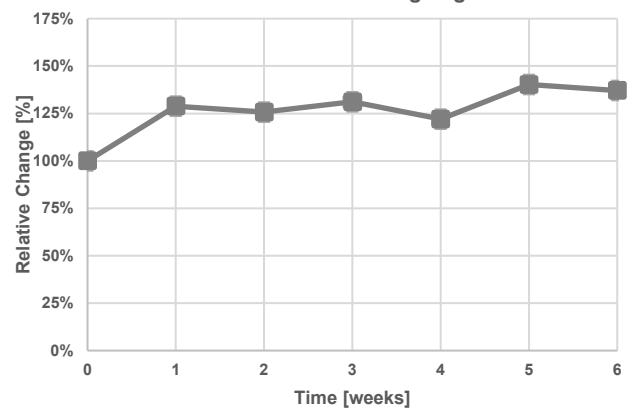

Stress at Strain (50%) after Heat Ageing at 50°C

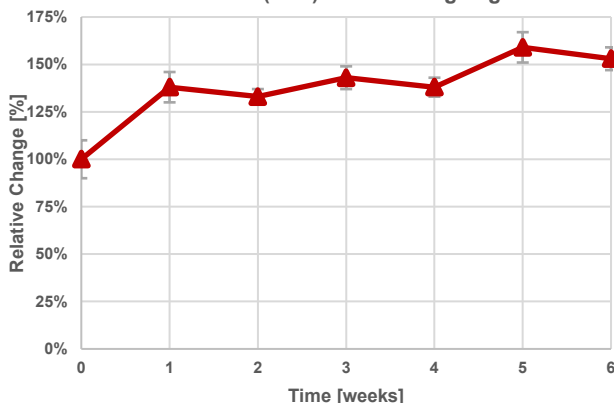

Stress at Strain (100%) after Heat Ageing at 50°C

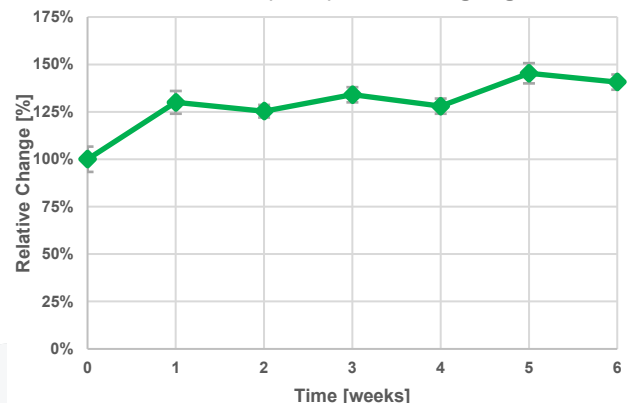

#### Test parameters:

ASTM D412: Type Die C, Pull speed: 500 mm/min, 22°C

#### Internal Data Sources:

FOR857256, FOR857259





## MED414™ ELASTOMER



### NOTE

The information provided in this Technical Data Sheet (TDS) including the recommendations for use and application of the product are based on our knowledge and experience of the product as at the date of this TDS. The product can have a variety of different applications as well as differing application and working conditions in your environment that are beyond our control. Henkel is, therefore, not liable for the suitability of our product for the production processes and conditions in respect of which you use them, as well as the intended applications and results. We strongly recommend that you carry out your own prior trials to confirm such suitability of our product.

Any liability in respect of the information in the Technical Data Sheet or any other written or oral recommendation(s) regarding the concerned product is excluded, except if otherwise explicitly agreed and except in relation to death or personal injury caused by our negligence and any liability under any applicable mandatory product liability law.

In case products are delivered by Henkel Belgium NV, Henkel Electronic Materials NV, Henkel Nederland BV, Henkel Technologies France SAS and Henkel France SA please additionally note the following:

In case Henkel would be nevertheless held liable, on whatever legal ground, Henkel's liability will in no event exceed the amount of the concerned delivery.

In case products are delivered by Henkel Colombiana, S.A.S. the following disclaimer is applicable:

The information provided in this Technical Data Sheet (TDS) including the recommendations for use and application of the product are based on our knowledge and experience of the product as at the date of this TDS. Henkel is not liable for the suitability of our product for the production processes and conditions in respect of which you use them, as well as the intended applications and results. We strongly recommend that you carry out your own prior trials to confirm such suitability of our product.

Any liability in respect of the information in the Technical Data Sheet or any other written or oral recommendation(s) regarding the concerned product is excluded, except if otherwise explicitly agreed and except in relation to death or personal injury caused by our negligence and any liability under any applicable mandatory product liability law.

In case products are delivered by Henkel Corporation, Resin Technology Group, Inc., or Henkel Canada, Inc. the following disclaimer is applicable:

The data contained herein are furnished for information only and are believed to be reliable. We cannot assume responsibility for the results obtained by others over whose methods we have no control. It is the user's responsibility to determine suitability for the user's purpose of any production methods mentioned herein and to adopt such precautions as may be advisable for the protection of property and of persons against any hazards that may be involved in the handling and use thereof. In light of the foregoing, Henkel Corporation specifically disclaims all warranties expressed or implied, including warranties of merchantability or fitness for a particular purpose, arising from sale or use of **Henkel Corporation's products. Henkel Corporation specifically disclaims any liability for consequential or incidental damages of any kind, including lost profits.** The discussion herein of various processes or compositions is not to be interpreted as representation that they are free from domination of patents owned by others or as a license under any Henkel Corporation patents that may cover such processes or compositions. We recommend that each prospective user test his proposed application before repetitive use, using this data as a guide. This product may be covered by one or more United States or foreign patents or patent applications.

#### Trademark Usage

Except as otherwise noted, all trademarks in this document are trademarks of Henkel Corporation in the U.S. and elsewhere. ® denotes a trademark registered in the U.S. Patent and Trademark Office.



**LOCTITE®**



**FIND OUT MORE AT**  
**LOCTITEAM.COM**

**LOCTITE®**  
Henkel Corporation  
[loctite3d@henkel.com](mailto:loctite3d@henkel.com)



Version 2025/11/04